




- 1: Concrete Masonry Unit
- 2: Metal Stud Frame
- 3: ArmorWall™ BG (R10, R15, or R21 Standard)
- 4: ArmorWall™ VP (R10, R15, or R21 Standard)
- 5: #14-13 DP1 Self Tapping Screw
- 6: Anchor Bolt
- 7: Approved Sealant at Seams and Fasteners
- 8: Termite Stop, if Required by Local Codes
- 9: Drainage Board
- 10: Vented Hat Channel
- 11: Cladding System Clip
- 12: Metal Wall Panel
- 13: IQBrick™ Foundation Veneer
- 14: Standard Pointing Mortar

DETAIL:
METAL WALL CLADDING ON ARMORWALL™ VP TO METAL STUD FRAME
ASSEMBLY AND ARMORWALL™ BG TO CMU FOUNDATION

SCALE:
NTS

REVISION:
01

NOTES:
- ANCHOR BOLTS MUST BE PRE-DRILLED. ALWAYS EMBED PER FASTENER REQUIREMENTS.

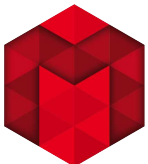

704-636-2411
www.maxlifeindustries.com

Mail To:
MaxLife Industries
P.O. Box 2128
Salisbury, NC 28145

MAXLIFE
INDUSTRIES
INNOVATING THE
BUILDING ENCLOSURE

Ship To:
1225 Chuck Taylor Lane
Salisbury, North Carolina 28147